

Which FreeGlide?

How to determine the right FreeGlide

The FreeGlide is available in four sizes. The size required will depend upon the diameter of the pipe where the FreeGlide is to be installed.

Dimension A = distance to the centre line of the cup

Dimension B = distance to the end of the seal peg (this will be the minimum diameter of the pipe that the FreeGlide can be installed in)

