

## QAQC Powder Lance


Cross Sectional Sampler for Cohesive Powders

The Powder Lance can be used to take large volume samples of cohesive powders. The sampler can be used horizontally through a sack or else it can be used vertically.

- Cross sectional sampler
- 316 stainless steel
- Suitable for sticky cohesive powders

### Operation

1. Insert the sampler into the product.
2. Rotate the sampler through 360°. The scraper forces the powder in to the sampler along the length of the slot.
3. Remove the sampler.
4. Unscrew the tip of the sampler.
5. Push the Sample Ejection Rod into the Powder Lance to push out the sample

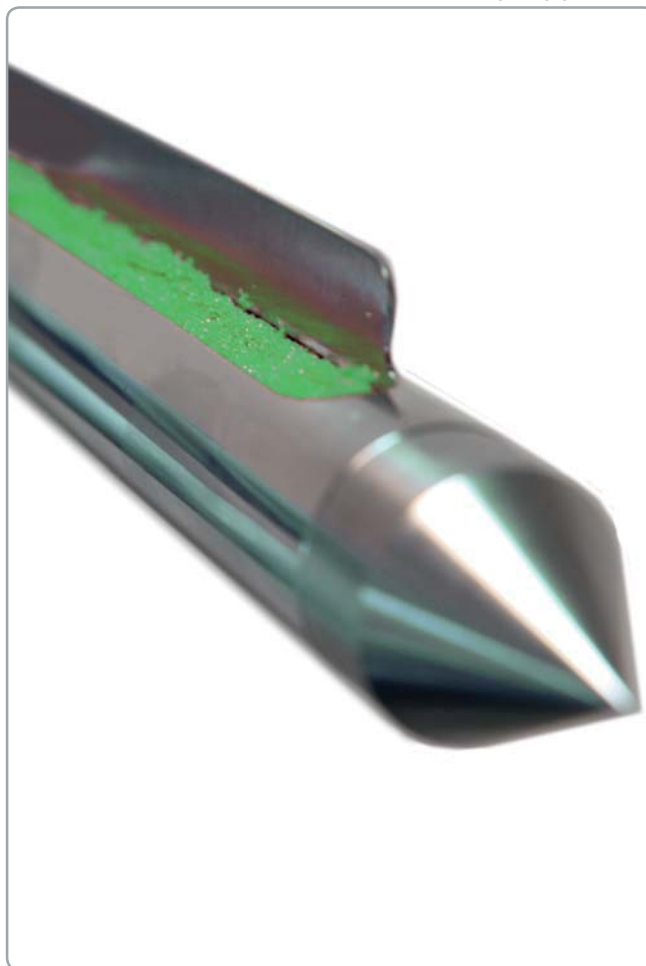

Cohesive Powders



| Stock No.     | Sampler Length | Slot Length | Max Sample Volume |
|---------------|----------------|-------------|-------------------|
| 675 2250A600  | 630mm          | 540mm       | 190ml             |
| 675 2250A1000 | 1030mm         | 930mm       | 300ml             |
| 675 2250A2000 | 2030mm         | 1500mm      | 520ml             |

|               |   |
|---------------|---|
| 675 8570A700  | Sample Ejection Rod - 316 stainless steel - 700mm length  |
| 675 8570A1100 | Sample Ejection Rod - 316 stainless steel - 1100mm length |

Cleaning Brushes - see page 129

Sampler Cases - see page 130

XRF Certification - see page 139

675 TIP2 Round tip (sampler supplied as standard with pointed tip)

**QUICK QUOTE**

**ONLINE PRICING**